

216 19TH AVENUE NORTH • NASHVILLE, TN 37203 • 800.252.9247

AUTOMATIC TRAP WOBBLER KIT ASSEMBLY INSTRUCTIONS MODEL: AWK45




- PARTS INCLUDED:
- 4 – M12 BOLTS/NUTS
 - 8 - WASHERS
 - 3 - DIRECTIONAL PLATE BOLTS
 - 2 - DIRECTIONAL PLATES
 - 1- TOP PLATE
 - 4 - M10 TRAP BOLTS

Warning::: when assembling or adjusting your wobbler, you absolutely must ensure that the auto trap is disarmed with the arm in the 12 o'clock position or that the spring is completely removed!!!

WARNING: When assembling or adjusting your Wobbler, you absolutely MUST ensure that your automatic trap is disarmed with the arm in 12 o'clock position or that the spring is completely removed!!!


1: ATTACH DIRECTIONAL PLATES USING PLATE BOLTS. INSERT TWO INSIDE BOLTS FROM UNDERNEATH. ATTACH CENTER BOLT FROM ABOVE.

***MAKE SURE ROTOR IS INSIDE DIRECTIONAL PLATE OPENING**

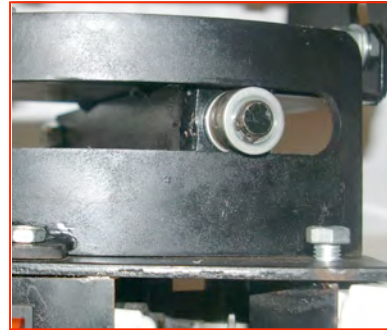


2: ALIGN TOP PLATE WITH CRESENT SHAPE BOLT HOLE FACING AWAY FROM DIRECTIONAL PLATE. INSERT BOLT WITH WASHER AND ATTACH TO NUT WITH WASHER ON THE INSIDE





3: INSERT LEGS FROM YOUR AUTOMATIC TRAP INTO THE LEG HOLES UNDERNEATH THE WOBBLER AND SECURE WITH M10 BOLT.



4: LEVEL TOP PLATE OF WOBBLER KIT AND SET YOUR AUTOMATIC TRAP ON TOP. USE THE 4 TRAP BOLTS TO SECURE TRAP TO TOP OF THE WOBBLER KIT.

ATTACH BATTERY CABLES FOR YOUR AUTOMATIC TRAP & AUTO WOBBLER & YOU'RE READY TO SHOOT!

SAFETY

Shooter should always stand to the side of the thrower, with a distance of no less than ten yards (30 feet) between the shooter and the thrower. Thrown targets can cause injuries. Be sure to first practice using thrower in an open area away from people, trees or animals (recommend at least 400 meter open field / shot fall zone).

- ❖ READ ALL INSTRUCTIONS BEFORE USING THROWER.
- ❖ ALWAYS WEAR PROPER EYE PROTECTION.
- ❖ NEVER THROW TOWARD SHOOTER OR BYSTANDER.
- ❖ NOT RECOMMENDED FOR CHILDREN UNDER 10.
- ❖ FOR USE ONLY UNDER CLOSE ADULT SUPERVISION.
- ❖ ALWAYS OBSERVE GUN RANGE SAFETY RULES.
- ❖ DO NOT ALTER THROWER.

You must ensure that the trap is in an un-cocked position and completely disarmed when not in use.

PLEASE DO NOT RETURN ITEM TO STORE. FOR QUESTIONS, CONCERNS OR WARRANTY INFORMATION, PLEASE CALL: 800-252-9247 OR EMAIL customerservice@doalldoors.com


PLEASE ENSURE THAT ALL PARTIES INVOLVED WITH THE OPERATION OF THE TRAP READ AND ADHERE TO ALL SAFETY WARNINGS.

DO-ALL TRAPS, LLC DBA DO-ALL OUTDOORS, LLC DOES NOT ACCEPT ANY RESPONSIBILITY FOR DAMAGES AND/OR INJURY SUSTAINED FROM THE USE OR MISUSE OF THIS PRODUCT.

FOR WARRANTY REPAIR OR REPLACEMENT, PLEASE DO NOT RETURN ITEM TO THE STORE.

CALL DO-ALL OUTDOORS AT 800.252.9247 OR EMAIL CUSTOMERSERVICE@DO-ALLTRAPS.COM

The Automatic Trap Wobbler Kit comes assembled with left to right oscillating plate. When switching to “w” style wobbler plate insert guide spring to control the rise and fall. Once this spring has been inserted it can be left in when using either guide plate.

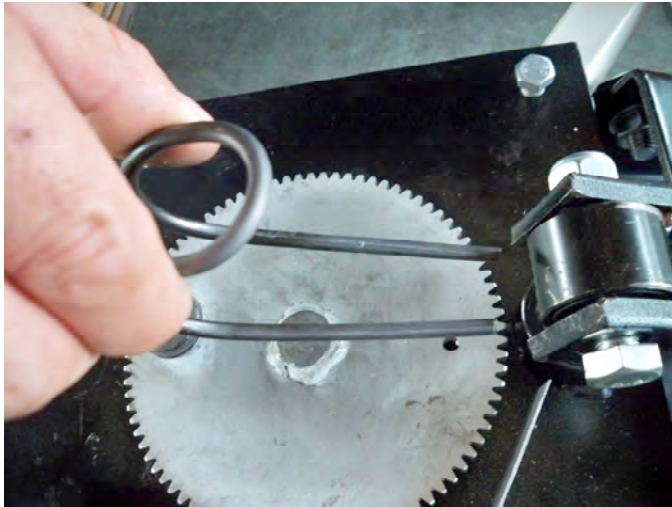

1) Rotate the swinging arm backward. 2) Slide legs of spring underneath the swinging arm axle. Slide spring in until it connects around axle of swing arm. 3) Rotate arm back to front. 4) Attach W-Plate: Press the top of the swinging arm and insert two inside bolts from underneath and insert the center bolt from above.





BERSA

For target shooting or home defense, Do-All Outdoors, LLC.
Recommends Bersa Guns. Visit our friends at www.bersa.com



Firearms | Holsters | Grips | Apparel | Accessories