



## BUCKSNORT GAME HOIST

### Parts Included:

- 1 Ratchet Strap
- 1 Hoist Arm Assembly
- 2 Lengths of Chain
- 2 Locking Clamps
- 1 Gambrel
- 1 Carrying Bag






**Register your product, find Instructions, Video, FAQs & Keep up with all of our new & exciting products by visiting: [www.doalldoors.com](http://www.doalldoors.com)**

**DO-ALL TRAPS, LLC DBA DO-ALL OUTDOORS, LLC DOES NOT ACCEPT ANY RESPONSIBILITY FOR DAMAGES AND/OR INJURY SUSTAINED FROM THE USE OR MISUSE OF THIS PRODUCT.**



**1.** Attach ratchet strap to hoist arm.

Pull strap from ratchet strap through lower opening on brace of arm assembly.

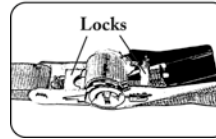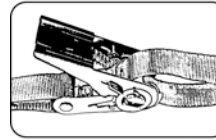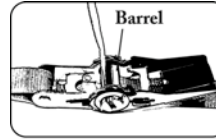

To Use Ratchet Strap:

**1.** With ratchet in the open position, push strap through the opening in the ratchet barrel and then over barrel back towards the strap. Pull tightly to remove slack from the strap. Ratchet back and forth to tighten.

**2.** After tightening is complete, push ratchet handle down into locked position.

**3.** To loosen, pull on spring loaded retaining locks to open ratchet completely and pull strap through.



**2.** Holding arm assembly to tree, hook straps of ratchet strap together then use ratchet to tighten securely to tree.



**3.** Attach one end of the longer chain to hook at the top of hoist. Wrap chain around the tree and secure link of chain to the other hook at top of hoist to hold hoist firmly to tree.



**4.** Unscrew bolt on one of the clamps and hook it through o-ring at top of hoist and use it to attach one end of shorter chain to hoist.



**5.** Attach remaining clamp to o-ring at end of hoist arm and use it to attach other end of shorter chain to hoist at desired length and angle.

**For videos or more information, or to  
register your product, go to  
[www.doalldoors.com](http://www.doalldoors.com)**

**Customer Service: 1-866-SHOT-DOC**

**COMMANDMENTS OF SAFE GUN HANDLING:**

- Treat every firearm as if it were loaded and always keep the muzzle pointed in a safe direction.
- Identify your target and what is beyond it.
- Ensure the firearm and ammunition are in good working condition and that only the correct ammunition is used.
- Store firearms and ammunition separately under lock and key, and use trigger locks.
- Always keep the action open except when actually hunting or preparing to shoot and always keep your finger off the trigger except when firing.
- Never point a firearm at anything you do not want to shoot. Avoid all horseplay with a firearm.
- Never climb a fence, tree, stand in or jump a ditch without unloading your firearm.
- Never shoot at a flat hard surface or water.
- Avoid alcohol and other drugs before or during hunting and shooting.
- Align target perpendicular to shooter and not at an angle.
- Always set target in front of a safe backdrop.



**BERSA**

**For target shooting or home defense, Do-All Outdoors, LLC.  
Recommends Bersa Guns. Visit our friends at [www.bersa.com](http://www.bersa.com)**



**Firearms | Holsters | Grips | Apparel | Accessories**