



THE GUN BUGGY SHOOTING CART

Phillips head screwdriver
Required for assembly

Parts:

Axel/brake assembly
Buggy frame
1 front wheel
2 rear wheels
2 screws



Register your product, find Instructions, Video, FAQs & Keep up with all of our new & exciting products by visiting: www.doalloutdoors.com

DO-ALL TRAPS, LLC DBA DO-ALL OUTDOORS, LLC DOES NOT ACCEPT ANY RESPONSIBILITY FOR DAMAGES AND/OR INJURY SUSTAINED FROM THE USE OR MISUSE OF THIS PRODUCT.



1. Cut plastic ties and remove all protective foam covers. Unfold buggy until it locks into open position and lay it front side down.

2. Slide front wheel onto front frame posts. Depress locking pins on frame posts to allow wheel axel to slide on completely, pins should pop back out through holes in wheel axel to secure it in place.



Depress again to remove wheel

3. Slide back wheel axel/brake assembly over back frame posts depressing locking pins as in step 2.



4. Push wheels onto ends of axel. Push firmly until wheels snap on securely.

To remove: depress silver release on wheel hub and pull wheel off.

5. Using phillips head screwdriver, screw provided screws through cross bar above front wheel into back of wheel cover securing it in place.



For videos or more information, or to register your product, go to www.doalldoors.com

Customer Service: 1-866-SHOT-DOC

Never use buggy with loaded weapons!

COMMANDMENTS OF SAFE GUN HANDLING:

- Treat every firearm as if it were loaded and always keep the muzzle pointed in a safe direction.
- Identify your target and what is beyond it.
- Ensure the firearm and ammunition are in good working condition and that only the correct ammunition is used.
- Store firearms and ammunition separately under lock and key, and use trigger locks.
- Always keep the action open except when actually hunting or preparing to shoot and always keep your finger off the trigger except when firing.
- Never point a firearm at anything you do not want to shoot. Avoid all horseplay with a firearm.
- Never climb a fence, tree, stand in or jump a ditch without unloading your firearm.
- Never shoot at a flat hard surface or water.
- Avoid alcohol and other drugs before or during hunting and shooting.
- Align target perpendicular to shooter and not at an angle.
- Always set target in front of a safe backdrop.



BERSA

For target shooting or home defense, Do-All Outdoors, LLC. Recommends Bersa Guns. Visit our friends at www.bersa.com



Firearms | Holsters | Grips | Apparel | Accessories