

Correction to gun holders on the Do-All Outdoors Gun Buggy model GC01.

Some early models of the Do-All Outdoors Gun Buggy were assembled with the gun holders facing down. While this can hold your long guns securely, it is not the optimal position. To turn the gun holders over, follow the simple steps below. If you have any questions, feel free to call Do-All Outdoors customer service line at 1-866-SHOT-DOC.




**Step 1:** Remove rubber cover on gun holders



**Step 3:** Turn yoke over and re-attach screws



**Step 2:** Use a phillips screw driver to remove screws on yoke

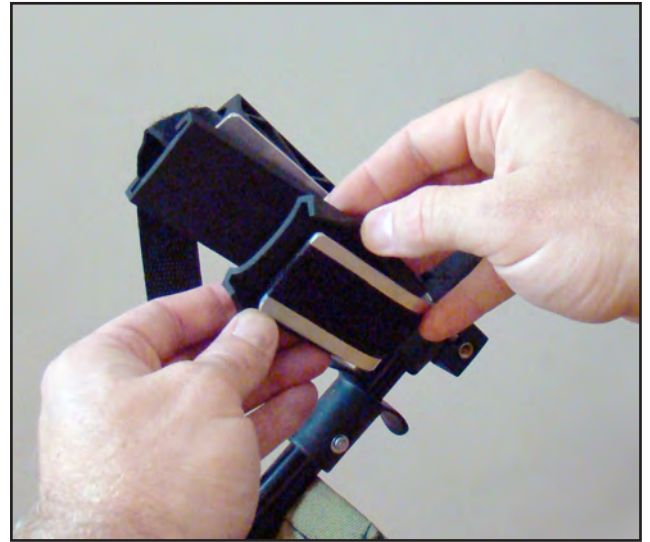

**Step 4:** Replace rubber cover on reassembled holder



[www.doalloutdoors.com](http://www.doalloutdoors.com)  
[customerservice@doalloutdoors.com](mailto:customerservice@doalloutdoors.com)