



SIMPLE SHOT PAPER TARGET HANGER



COMMANDMENTS OF SAFE GUN HANDLING:


- Treat every firearm as if it were loaded and always keep the muzzle pointed in a safe direction.
- Identify your target and what is beyond it.
- Ensure the firearm and ammunition are in good working condition and that only the correct ammunition is used.
- Store firearms and ammunition separately under lock and key, and use trigger locks.
- Always keep the action open except when actually hunting or preparing to shoot and always keep your finger off the trigger except when firing.
- Never point a firearm at anything you do not want to shoot. Avoid all horseplay with a firearm.
- Never climb a fence, tree, stand in or jump a ditch without unloading your firearm.
- Never shoot at a flat hard surface or water.
- Avoid alcohol and other drugs before or during hunting and shooting.
- Align target perpendicular to shooter and not at an angle.
- Always set target in front of a safe backdrop.

1. Insert footer and center post into thumb screw post openings. Tighten screws to secure.

2. Insert arms into appropriate openings.

3. Use provided clips on arms to secure any purchased paper targets. Loosen screw on top to lower top arms to desired height.

4. It is recommended that a cardboard backer is used behind targets to increase life of target. (not provided)

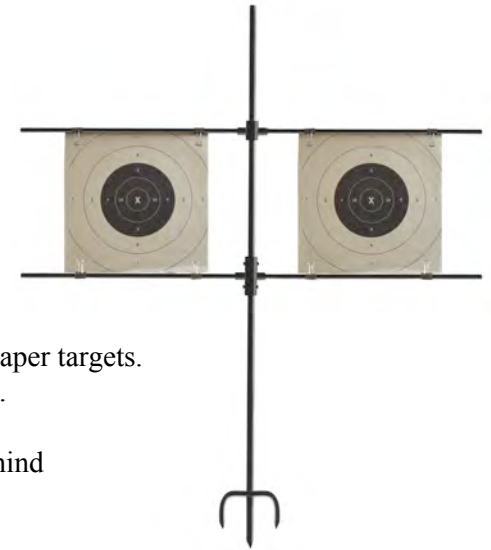

Register your product, find Instructions, Video, FAQs & Keep up with all of our new & exciting products by visiting: www.doalldoors.com

DO-ALL TRAPS, LLC DBA DO-ALL OUTDOORS, LLC DOES NOT ACCEPT ANY RESPONSIBILITY FOR DAMAGES AND/OR INJURY SUSTAINED FROM THE USE OR MISUSE OF THIS PRODUCT.



Do-All Recommends:

For target shooting or home defense, Do-All Outdoors, LLC. Recommends Bersa Guns. Visit our friends at www.bera.com



BERSA