

SPIN CYCLE TARGETS

.22 CALIBER TARGETS ARE RATED FOR:

Shorts, Longs and Long Rifles at a minimum of 30 yards
Mag's and .17's at a minimum distance of 100 yards
Soft Nose Lead Bullets Only

.38-.44 CALIBER TARGETS ARE RATED FOR:

Pistol Calibers at a minimum distance of 30 yards

9MM-.30-.06 CALIBER TARGETS ARE RATED FOR:

Pistol Calibers at a minimum distance of 30 yards
.270, .30-.06, etc. at a minimum distance of 100 yards
.22-.250, .223, etc. at a minimum distance of 200 yards
Soft Nose Lead Bullets Only

COMMANDMENTS OF SAFE GUN HANDLING:

- Treat every firearm as if it were loaded.
- Always keep the muzzle pointed in a safe direction.
- Identify your target and what is beyond it.
- Ensure the firearm and ammunition are in good working condition and that only the correct ammunition is used.
- Store firearms and ammunition separately under lock and key, and use trigger locks.
- Always keep the action open except when actually hunting or preparing to shoot and always keep your finger off the trigger except when firing.
- Never point a firearm at anything you do not want to shoot. Avoid all horseplay with a firearm.
- Never climb a fence, tree, stand in or jump a ditch without unloading your firearm.
- Never shoot at a flat hard surface or water.
- Avoid alcohol and other drugs before or during hunting and shooting


DO-ALL TRAPS, LLC DBA DO-ALL OUTDOORS, LLC DOES NOT ACCEPT ANY RESPONSIBILITY FOR DAMAGES AND/OR INJURY SUSTAINED FROM THE USE OR MISUSE OF THIS PRODUCT.



SPIN CYCLE TARGETS

Parts Included:

- 3 Ground Spikes
- 1 Left Target
- 1 Right Target
- 2 Curved Feet
- 1 Straight Foot
- 1 Base Extension
- 1 Top Target Axle
- 2 Bolt and Nut
- 2 Roll Pins
- 1 Thumb Screw for Extension

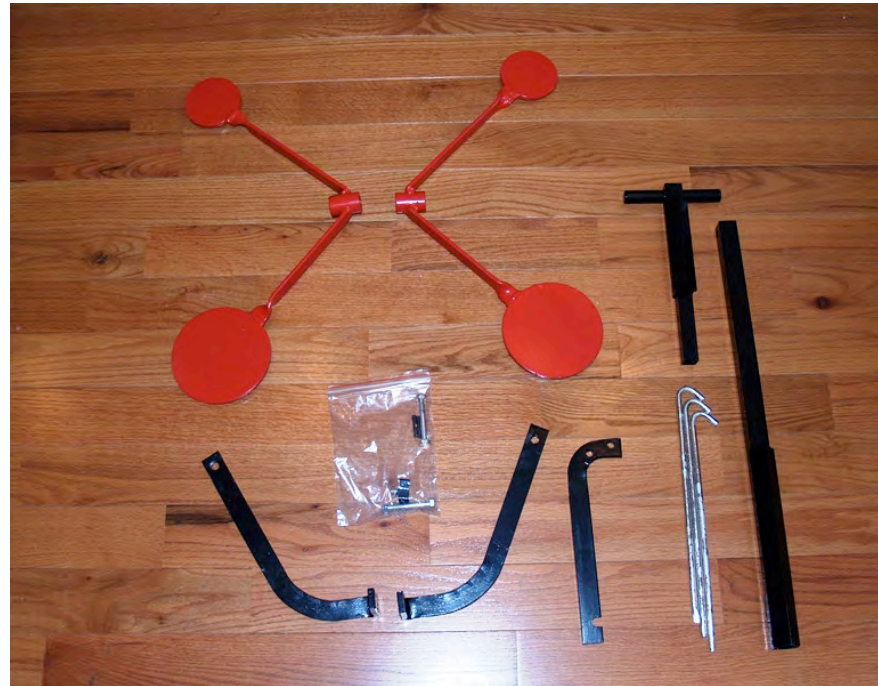

Register your product, find Instructions, Video, FAQs & Keep up with all of our new & exciting products by visiting: www.doalloutdoors.com



1. Take the Base Extension and the Top Target Axle and slide the Top Target Axle into the Extension piece. You want to make sure the Angled Bullet Deflection pieces are both on the front side and seating down against each other.



2. Use the provided Thumb Screw and tighten the Base Extension and the Top Target Axle together.



3. Take the 2 Curved Feet, the 1 Straight Foot, and the assemble Base Extension and bolt them together using the 2 provided Bolts and Nuts. The 2 Curved feet will go on the outside facing forward, curving out towards the shooter and make sure the Angle Bullet Deflection on the Base Extension is also pointing towards the shooter. The 1 Straight Foot will point and extend to the rear of the target offering stability. Now slip the bolts through all the pieces and tighten only when both are through and the 2 Nuts are hand tightened.



How everything in Step 3 is bolted together.

After this step the Assembly is finished.

Make sure all the bolts are tightened and you are ready to go.



4. The Left and Right Target can go on either side, so there is no designated left and right target, either will work. Take one of the targets and slip it on the Top Target Axle. You will notice a hole in each one of the Axles. This is where you will hammer in the 2 Roll Pins that are provided. The 2 Roll Pins don't have to go all the way down, just hammer so they are equally through on the top and bottom of the Axle.

5. You can add some grease periodically to the Top Target Axle to keep the targets spinning smoothly.

Drive ground spikes through holes in legs and over notch in back leg to secure to ground.

Have Fun and Enjoy.

Do-All Recommends:

For target shooting or home defense, Do-All Outdoors,LLC. Recommends Bersa Guns. Visit our friends at www.bersa.com

